

Valley Road Classroom Equipment



DVD Operations (Tiered Classrooms)

Step 1: Make sure the [projector\(s\)](#) is/are turned on and the [projector screen\(s\)](#) is/are down.

Step 2: Touch the picture of the "DVD" on the Crestron Display, located on top of the podium.



DVD

Step 3: Press the "Standby/On" button to on, located on the DVD player on the equipment tower **in the AV closet**.



Equipment Tower , located in the room's AV closet

Step 4: Press "Open/Close" button and insert a DVD disk.

Step 5: When finished using the DVD, please turn the DVD power off by pressing the "Standby/On" button to standby.

* Please use the controls located in the Crestron Display on top of the podium to operate the DVD.



DVD Controls

* Adjust the volume by using the "Program Volume" controls located on the right side of the Crestron Display.



Program Volume